



◀ - EL EXTREMO IZQUIERDO DE LOS TRUSSES (VEA LOS PERFILES)

TODAS LAS DIMENSIONES PARA LAS TRUSSES SON DE FUERA DE LA MADRERA (u.n.o.)

ESTABLECER LOS TRUSSES NIVELADAS CON LA ESTRUCTURA (u.n.o.)

◀ - LEFT END OF TRUSS (SEE TRUSS PROFILES)

ALL ROOF TRUSS DIMENSIONS ARE FROM OUTSIDE EDGE OF STUD (u.n.o.)

SET ROOF TRUSSES FLUSH WITH FRAMING (u.n.o.)

WARNING: Trusses must be handled with care to prevent damage and injury.

This truss placement diagram is to be used only as an installation aid; it is not a structural drawing. These trusses are designed as individual building components and are to be installed in accordance with the design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing.

Professional advice should be sought regarding handling, installation, temporary and permanent bracing needs. Temporary bracing is required and permanent bracing is required during installation of trusses to prevent possible collapse.

For general guidance regarding bracing, consult "BCSI-006" available jointly from WTCA & TSP.

Premier Building Supply must be notified of any issues requiring a back charge prior to any work being done. Premier Building Supply reserves the right to bill its service staff in lieu of being back charged.

Truss Connector Total List			
Manuf	Product	Qty	
Simpson	HUS26	6	●
Simpson	LUS24	22	●
Simpson	LUS28	6	▲
Simpson	THJA26	1	■

<p>1 - SDWC 15600 REQUIRED AT ALL BEARING LOCATIONS (u.n.o.)</p> <p>ALL TRUSS TO TRUSS CONNECTIONS = "NAILED" (u.n.o.)</p>
<p>1 - SDWC 15600 NECESARIO EN TODO LOS PUNTOS DE APOYO (u.n.o.)</p> <p>TODAS LAS CONEXIONES DE TRUSS A TRUSS = "CLAVADAS " (u.n.o.)</p>