

Actual materials and quantities may vary due to jobsite conditions, design changes and installation variations. It is the responsibility of the Builder for this Layout to be reviewed and Approved by an appropriate Design Professional as required by the permitting authority.

ALL ROOF LOADS ASSUMED TO BE SUPPORTED AT EXTERIOR WALLS AND BEAMS BY OTHERS, IF APPLICABLE, UNLESS OTHERWISE NOTED. NO ROOF LOADS APPLIED TO FLOOR MEMBERS.

11 7/8" TJI
210'S 16" O.C.
UNLESS OTHERWISE NOTED

HANGER NAILING FOR UNIFORMLY LOADED BEAMS

Joint & Beam Hanger Face Nailing Requirements for 3 & 4 Ply Supporting Members

For IUS or THF Hangers - Use 10d (0.148") x 3" nails.

For U, MIU, HU, HHUS, HGUS or HD, THD, THDH Hangers - Use 16d (0.162") x 3 1/2" nails.

*For hangers that have joint fasteners/connections, fill all holes with the manufacturer's recommended fasteners.

MULTIPLE PLY CONNECTION NAILING FOR UNIFORMLY LOADED BEAMS

2&3 PLY BEAMS	NAILED CONNECTION
9 1/2" - 11 1/2" Depth	(3) Rows of 10d (0.128") x 3" Box Nails at 12" o.c.
14" - 24" Depth	(4) Rows of 10d (0.128") x 3" Box Nails at 12" o.c.
4 PLY BEAM	NAILED CONNECTION
9 1/2" - 24" Depth	(4) Rows of 10d (0.128") x 3" Box Nails at 12" o.c.

- 16d (0.131") pneumatic nails may be substituted for 10d (0.128") Box nails.
- Stagger nails by 6" per ply
- All plies must be same material, grade, and 1 1/2" thickness.
- Joint Hanger's connecting into the side of the beam must be installed with minimum 3" long nails.

MULTIPLE PLY CONNECTION NAILING FOR POINT LOADS

Hanger shown for reference. Install screws from side opposite of hanger. Install 1/2 the required screws on each side of hanger.

1 1/2" (TYP)

3 1/2" (TYP)

EQUAL SPACING

(4) ROWS 14" & DEEPER

(3) ROWS 11 1/2" & LESS

	SIMPSON STRONG-TIE® HANGERS				USP HANGERS		
	U	HU	HHUS	HGUS	HD	THD	THDH
3 PLY SUPPORT BEAM							
TOTAL # OF 3 1/4" TRUSSLOK® SCREWS	4	6	8	14	6	12	16
TOTAL # OF 3 1/4" SIMPSON SDS SCREWS	4	4	6	12	6	10	12
4 PLY SUPPORT BEAM							
TOTAL # OF 3 1/4" TRUSSLOK® SCREWS	4	6	10	20	8	16	20
TOTAL # OF 6" SIMPSON SDS SCREWS	6	8	12	24	10	20	26





*Connections based on FastenMaster TrussLok® and Simpson Strong-Tie® code reports.

- All plies assumed to be the same material, grade, and 1 1/2" in thickness

- Connections based on given hangers maximum capacity at 100% Load Duration Factor. Adequate for 115% and 125% Load Duration Factor as well.

- Connection assumes the use of 16d nails and max nailing in hangers.

- See TB-300 for alternate connector types and loading.

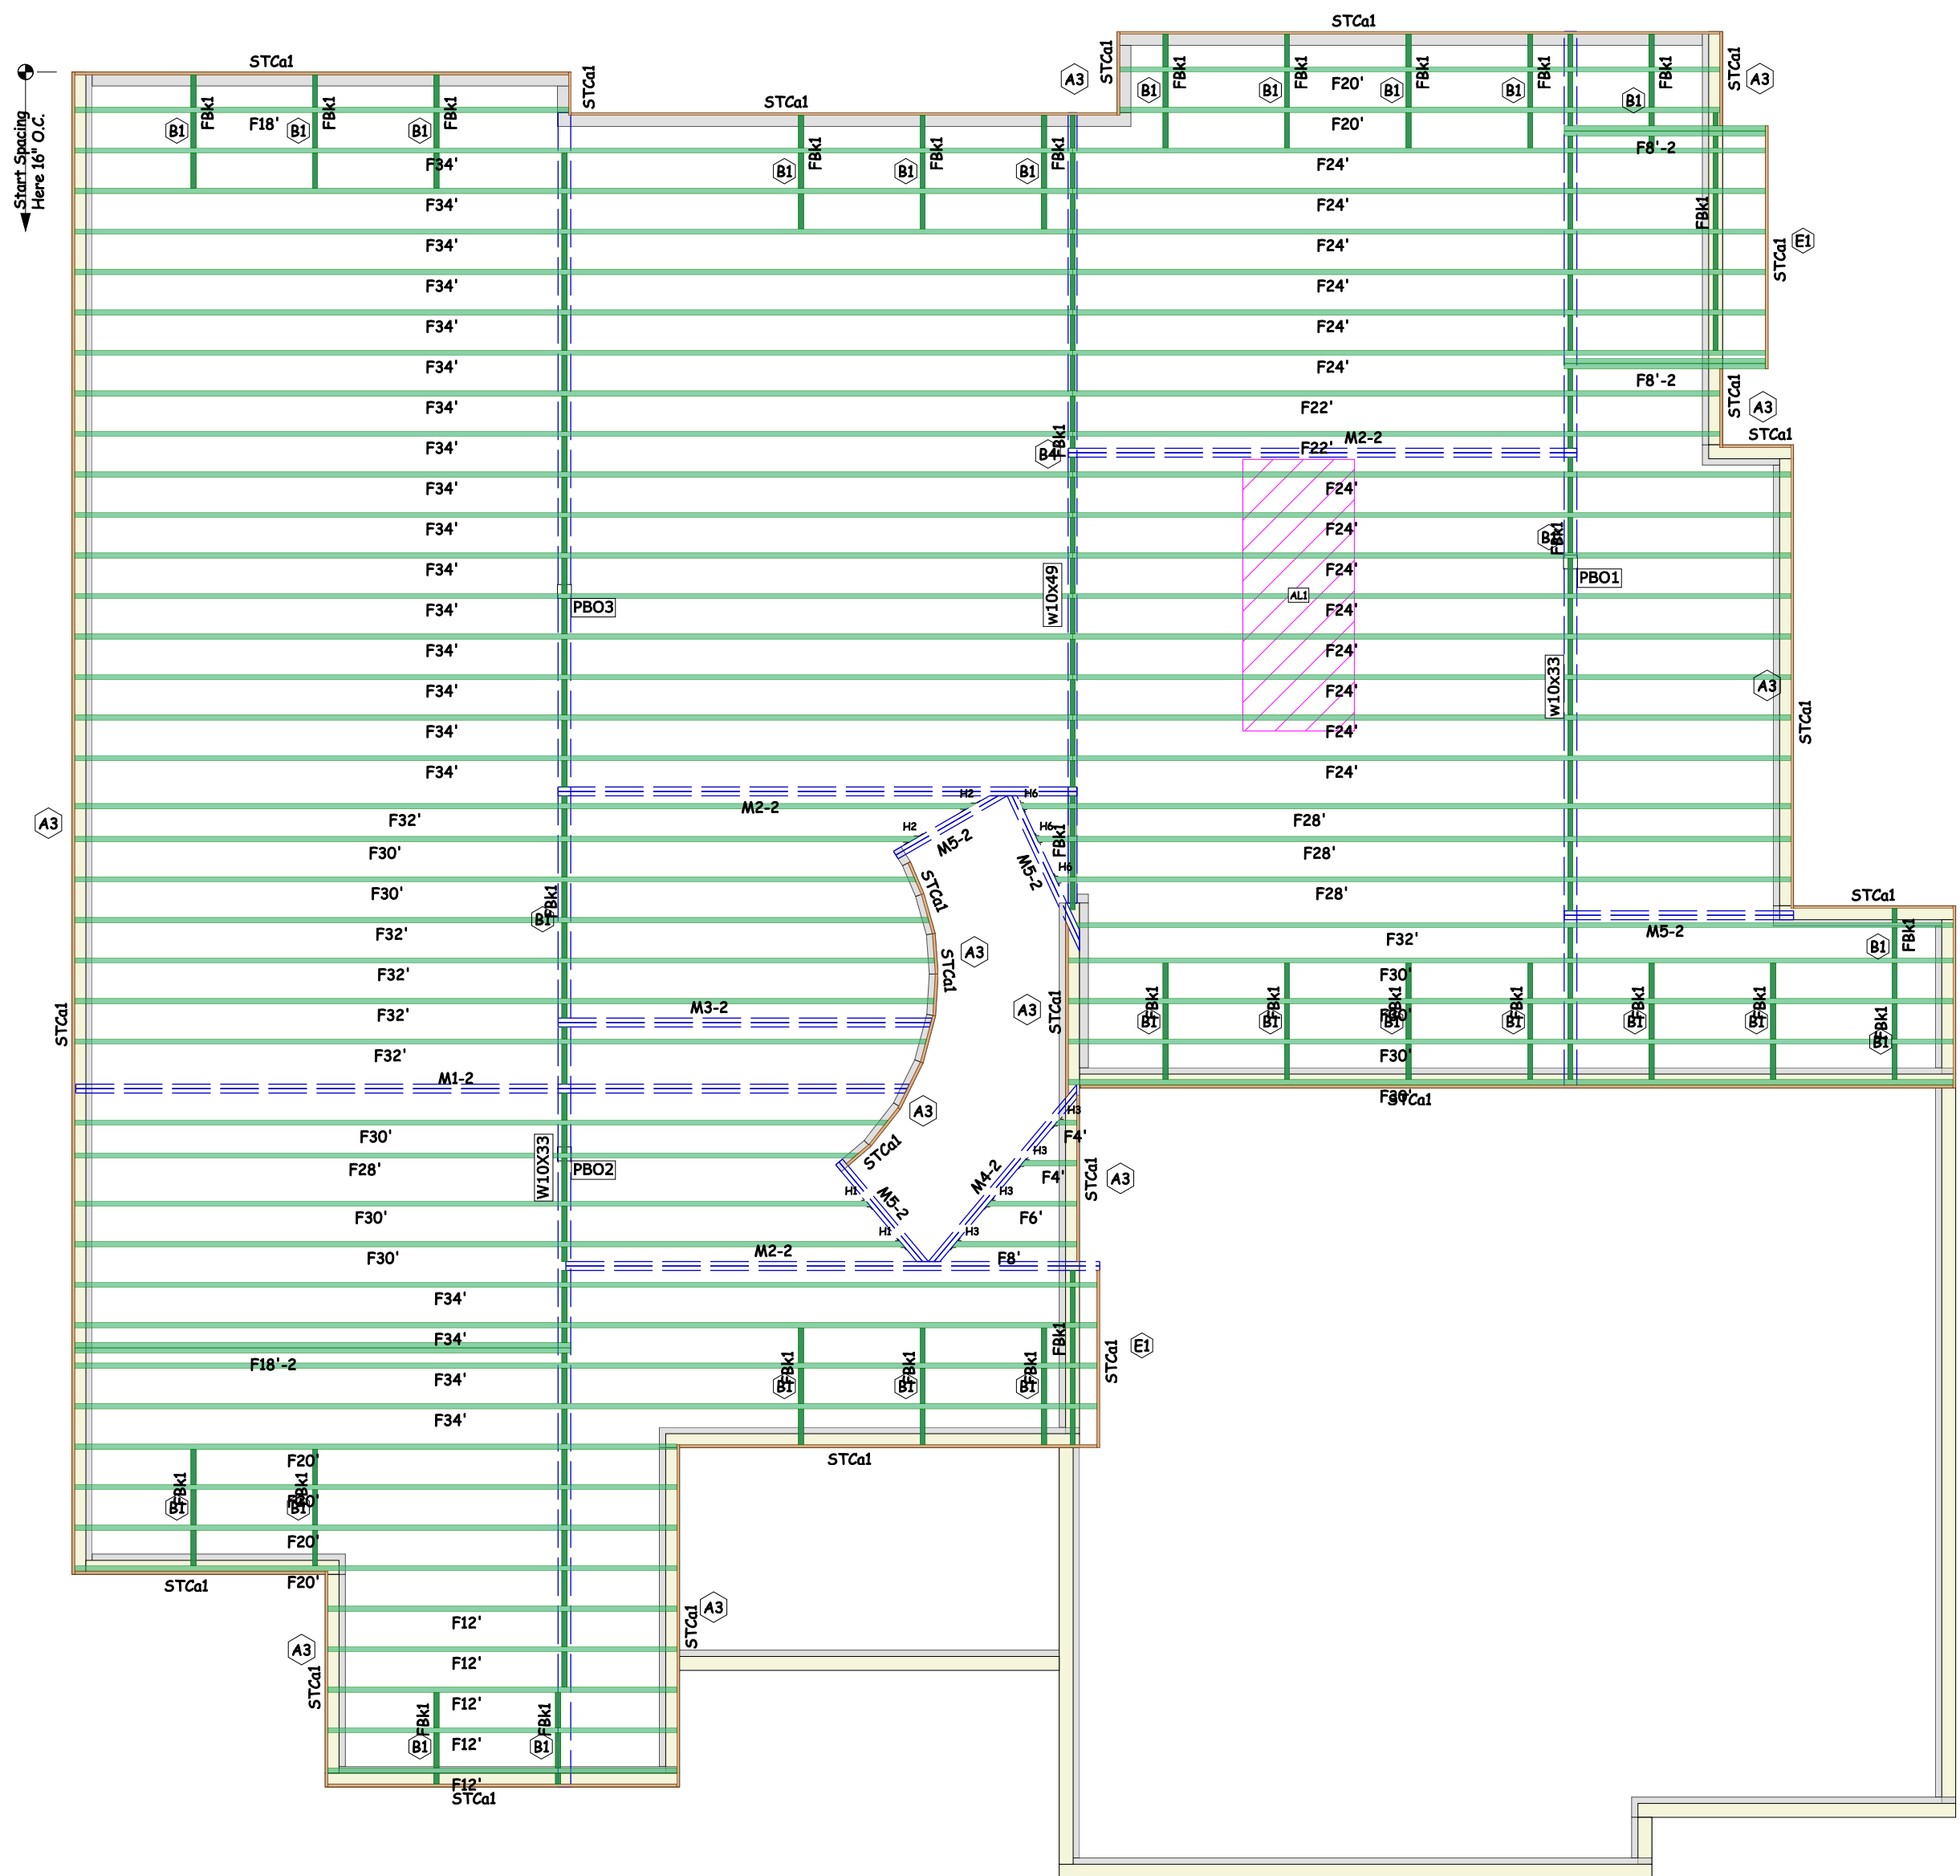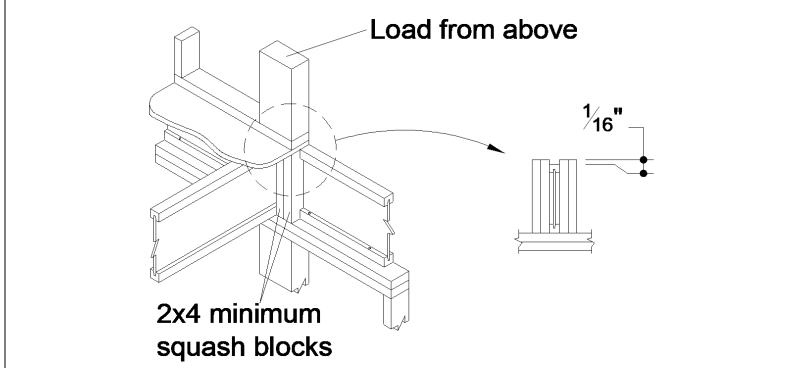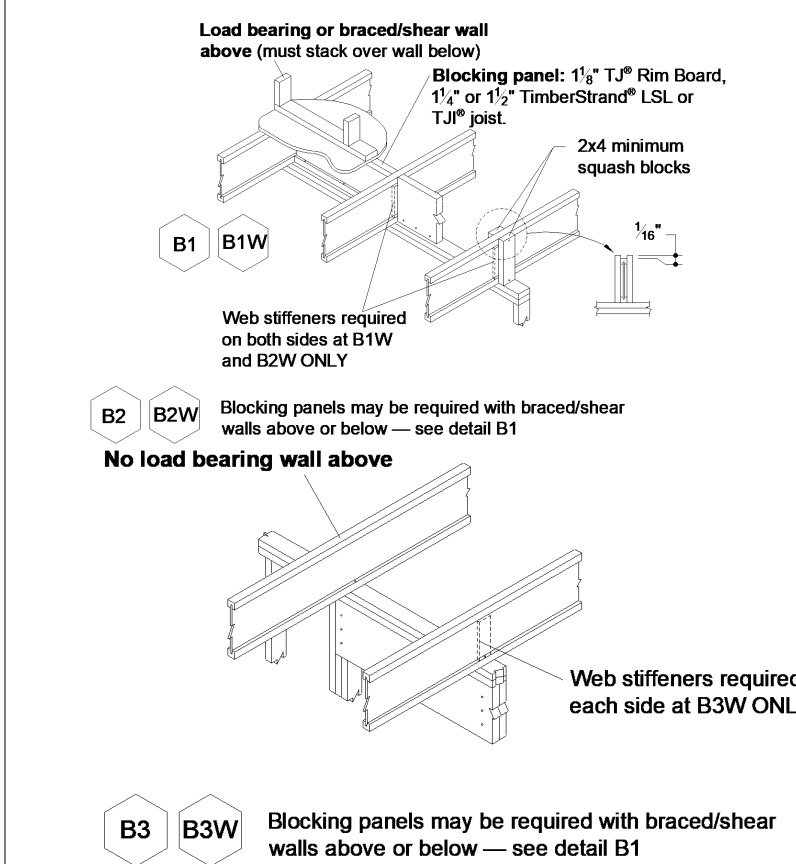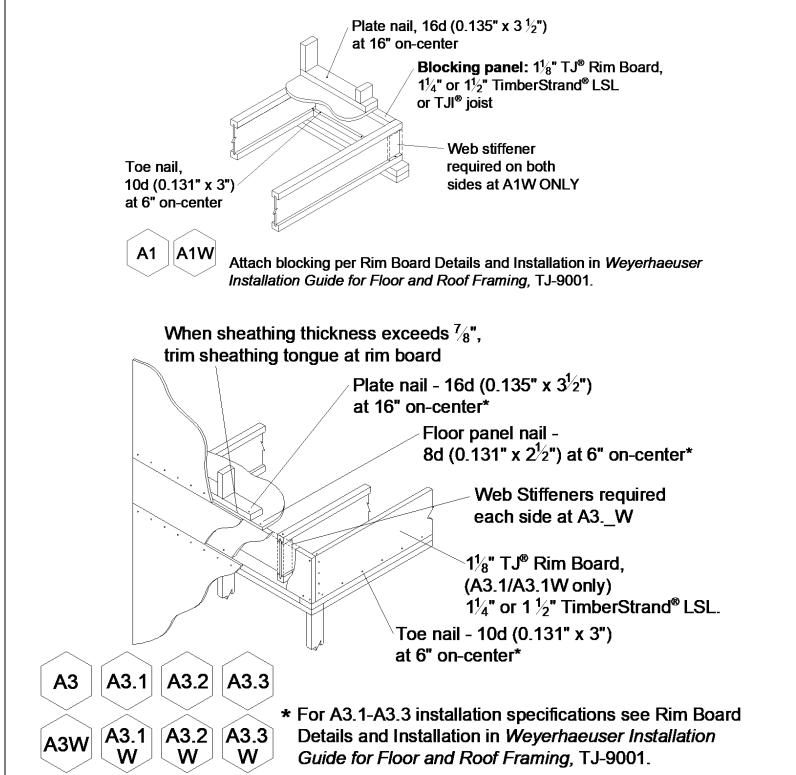

Framing Connector Summary						
PlotID	Qty	Manuf	Product	Design Method	Face Nails	Top Nails
H1	1	Simpson	LSSR2.1Z	Geometry Only	13- 10dx2.5	-
H2	2	Simpson	HU2.1/9X SKR60	Geometry Only	14- 10dx1.5	-
H3	4	Simpson	LSSR2.1Z	Geometry Only	13- 10dx2.5	-
H6	3	Simpson	LSSR2.1Z	Geometry Only	13- 10dx2.5	-

LEVEL NOTES	
Current Date:	9/12/2025
File Name:	fpm25-922_v1
Level Name:	Foundation
Building Code:	1807IRC 2018
Members with Design Overrides:	M2-2, M5-2
TJ-Pro Rating (Weighted Average):	44
Minimum Level TJ - Pro Rating & Joist:	TJ-Pro rating = 42, joist = F34' (3281)
Maximum Level TJ - Pro Rating & Joist:	TJ-Pro rating = 73, joist = F8'-2 (3486)
FLOOR	
Floor Container:	FC1
User Occupancy:	Residential/Living Areas
Floor Area Loading is:	40.0 lb/ft² Live Load & 12.0 lb/ft² Dead Load
Maximum Allowed Deflection:	Operator Added Additional Loads
TJ-Pro Rating Information:	L/480 Live Load & L/240 Total Load
Weighted Average:	44
Directly Applied Ceiling:	None
Decking Attachment:	Gable and Nail
Decking Material:	23/32"x48"x96" Weyerhaeuser Edge Panel (0/24) T&G FF
Perpendicular Partition:	No
Strapping at max 8' o.c.:	None
Blocking at max 8' o.c.:	No
Poured Flooring:	No

Accessories				
PlotID	Length	Product	Piles	Net Qty
9 1/8"	3/4" x 2 5/16"	Web Stiffeners	1	22
	23/32"x48"x96"	Weyerhaeuser Edge Panel (0/24) T&G FF	1	78

Products				
PlotID	Length	Product	Piles	Net Qty
F34'	34' 0"	11 7/8" TJI 210 joist	1	20
F32'	32' 0"	11 7/8" TJI 210 joist	1	6
F30'	30' 0"	11 7/8" TJI 210 joist	1	9
F28'	28' 0"	11 7/8" TJI 210 joist	1	4
F24'	24' 0"	11 7/8" TJI 210 joist	1	14
F22'	22' 0"	11 7/8" TJI 210 joist	1	2
F20'	20' 0"	11 7/8" TJI 210 joist	1	6
F18'-2	18' 0"	11 7/8" TJI 210 joist	2	2
F18'	18' 0"	11 7/8" TJI 210 joist	1	1
F12'	12' 0"	11 7/8" TJI 210 joist	1	5
F8'-2	8' 0"	11 7/8" TJI 210 joist	2	4
F8'	8' 0"	11 7/8" TJI 210 joist	1	1
F6'	6' 0"	11 7/8" TJI 210 joist	1	1
F4'	4' 0"	11 7/8" TJI 210 joist	1	2
M1-2	30' 0"	1 3/4" x 11 7/8" 2.0E Microlam LVL	2	2
M2-2	18' 0"	1 3/4" x 11 7/8" 2.0E Microlam LVL	2	6
M3-2	16' 0"	1 3/4" x 11 7/8" 2.0E Microlam LVL	2	2
M4-2	10' 0"	1 3/4" x 11 7/8" 2.0E Microlam LVL	2	2
M5-2	8' 0"	1 3/4" x 11 7/8" 2.0E Microlam LVL	2	8
STC1	16' 0"	1 1/8" x 11 7/8" TJ Rim Board	1	17

Blocking				
PlotID	Length	Product	Piles	Net Qty
F8k1	2' 0"	11 7/8" TJI 210 joist	1	148
F8k1	1' 0"	11 7/8" TJI 210 joist	1	34

Total Lengths	
Length	Product
2282' 0"	11 7/8" TJI 210 joist
284' 0"	1 3/4" x 11 7/8" 2.0E Microlam LVL
286' 0"	1 1/2" x 5 1/2" 1.3E StrandGuard TimberStrand LSL
272' 0"	1 1/8" x 11 7/8" TJ Rim Board
16' 8 3/4"	3/4" x 2 5/16" Web Stiffeners

WARNING

Joists are unstable until braced laterally

Bracing Includes:

- Blocking
- Hangers
- Sheathing
- Rim Board
- Strut Lines
- Rim Joist

DO NOT walk on joists until braced. INJURY MAY RESULT.

DO NOT walk on joists that are lying flat.


DO NOT stack building materials on unsheathed joists. Stack only over beams or walls.

WARNING NOTES:

Lack of proper bracing during construction can result in serious accidents. Observe the following guidelines:

- All blocking, hangers, rim boards and rim joists at the end supports of the TJI® joists must be completely installed and properly nailed.
- Lateral strength, like braced end wall or an existing deck, must be established at the ends of the bay. This can also be accomplished by a temporary or permanent deck (sheathing) fastened to the first 4 feet of joists at the end of the bay.
- Safety bracing of 1x4 (minimum) must be nailed to a braced end wall or sheathed area (as in note 2) and to each joist. Install bracing with 2 - 8d (0.117" x 2 1/2") nails each joist and end support at 6 ft on center (6 ft for TJ 110 joists). Without this bracing, buckling sideways or rollover is highly probable under light construction loads - such as a worker or one layer of unnailed sheathing.
- Sheathing must be completely attached to each TJI® joist before additional loads can be placed on the system.
- Ends of cantilevers require safety bracing on both the top and bottom flanges.
- The flanges must remain straight within 1/2" from true alignment.
- See www.wy.com for additional installation information.

▲ Weyerhaeuser, Microlam, Parallam, TimberStrand, TJI, TJ, and Trus Joist are registered trademarks of Weyerhaeuser NR. © 2022 Weyerhaeuser NR Company. All rights reserved.

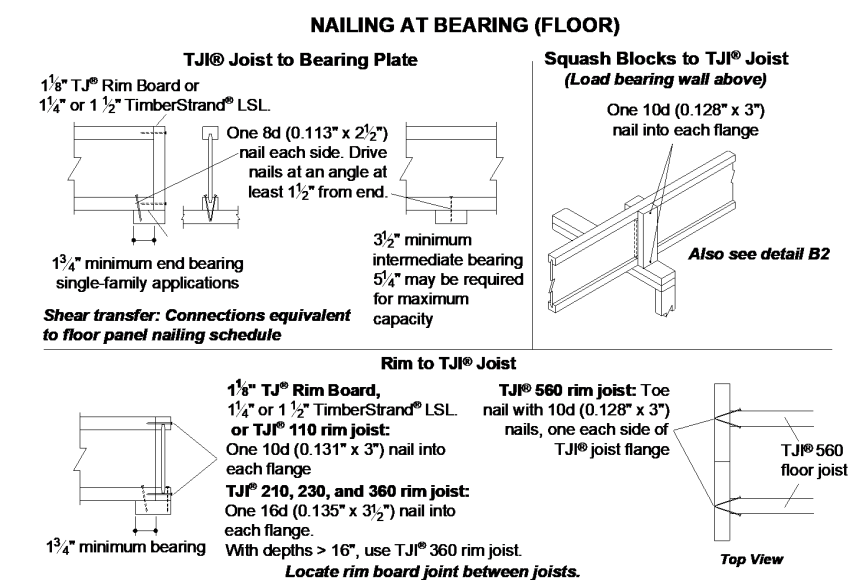

This layout is intended for product application assurance and is not intended to circumvent the need for a design professional as determined by the Building Codes. The designer of record and/ or builder/ framer is responsible to assure these drawings are compatible with the overall project.

ENGINEERED WOOD PRODUCTS

Weyerhaeuser

2214 NW KILLARNEY

MEAD LUMBER

WR-186

STRUCTURAL DATE:

ARCHITECTURAL DATE:

SCALE: NTS

PROJECT #: FPS 24-

9/12/2025

SHEET

10 OF 2

RELEASE FOR CONSTRUCTION AS NOTED ON PLANS REVIEW DEVELOPMENT SERVICES LEE'S SUMMIT, MISSOURI 10/02/2025 3:48:03

