
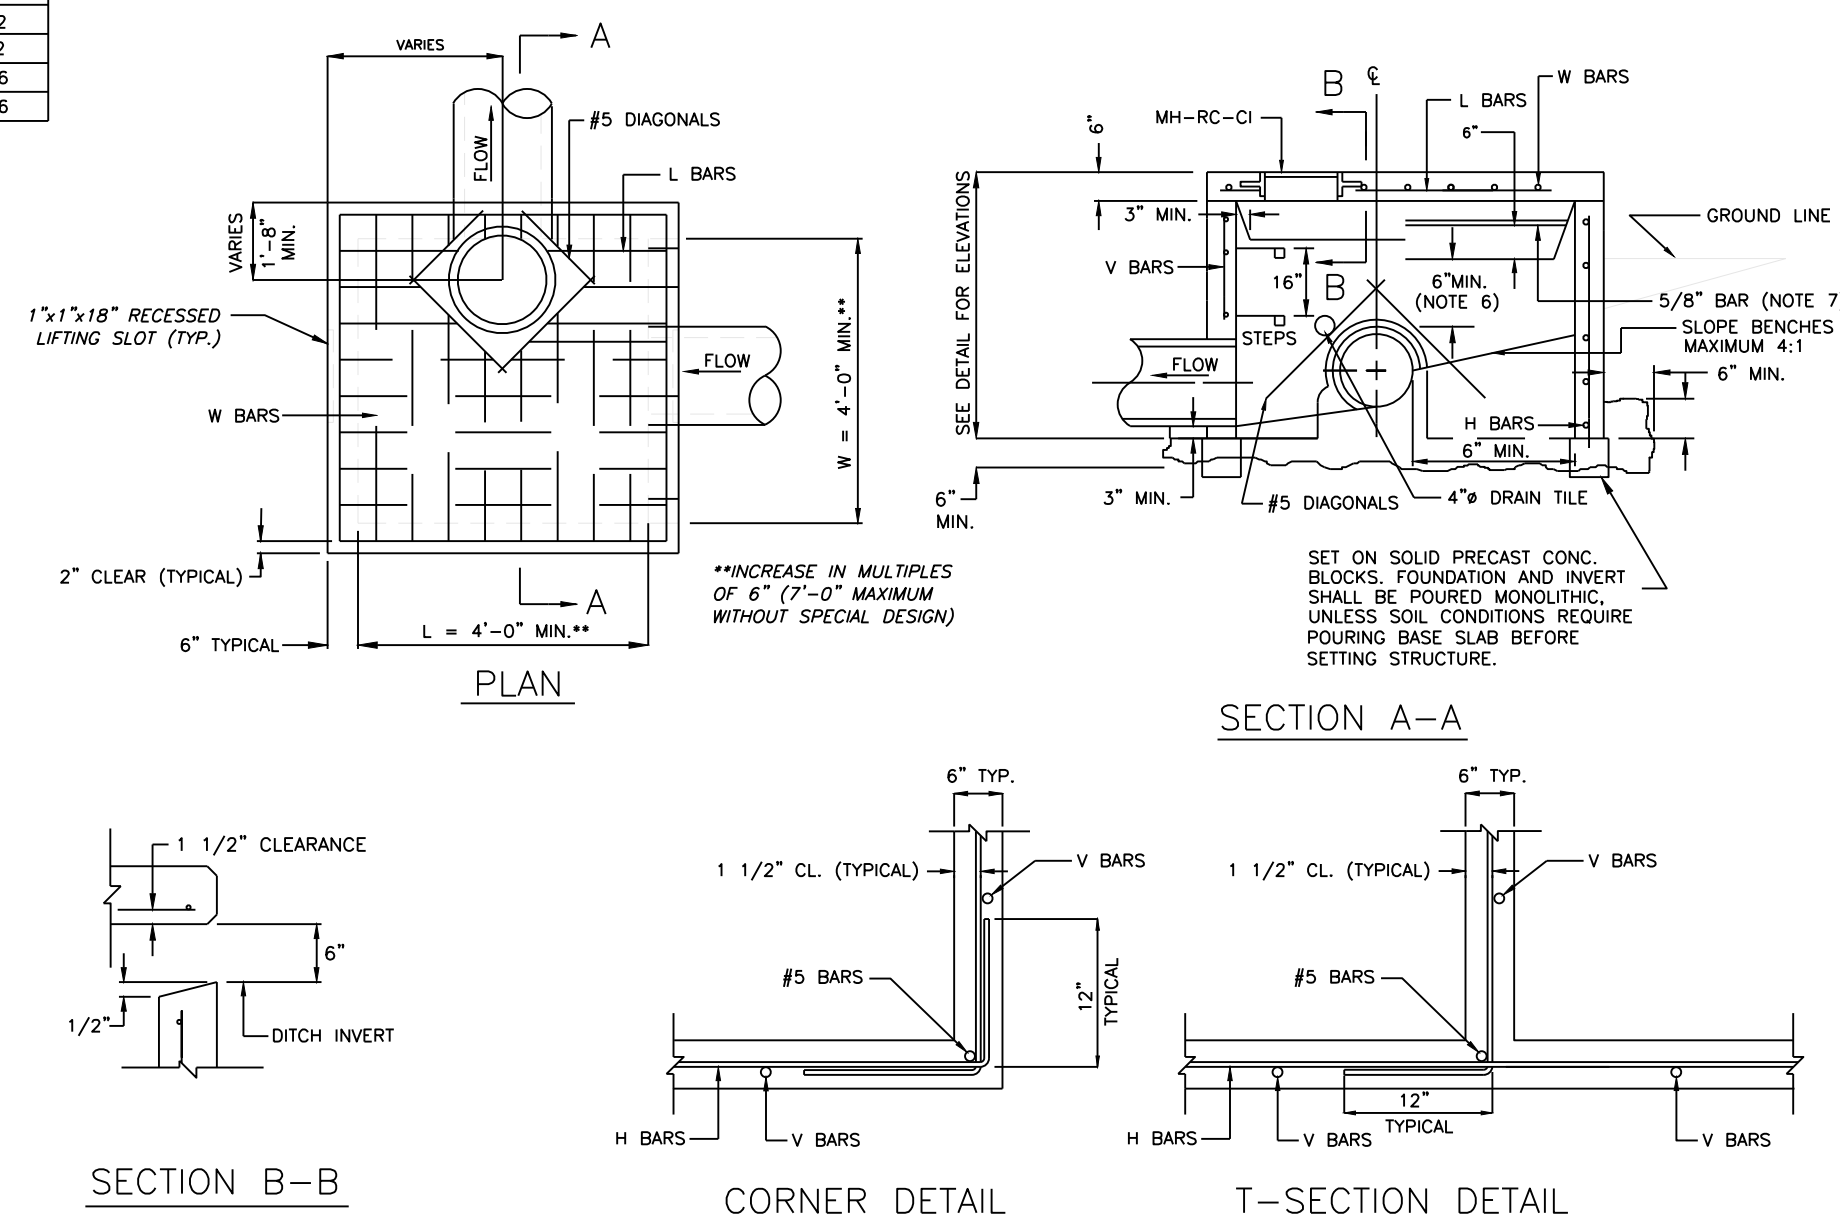
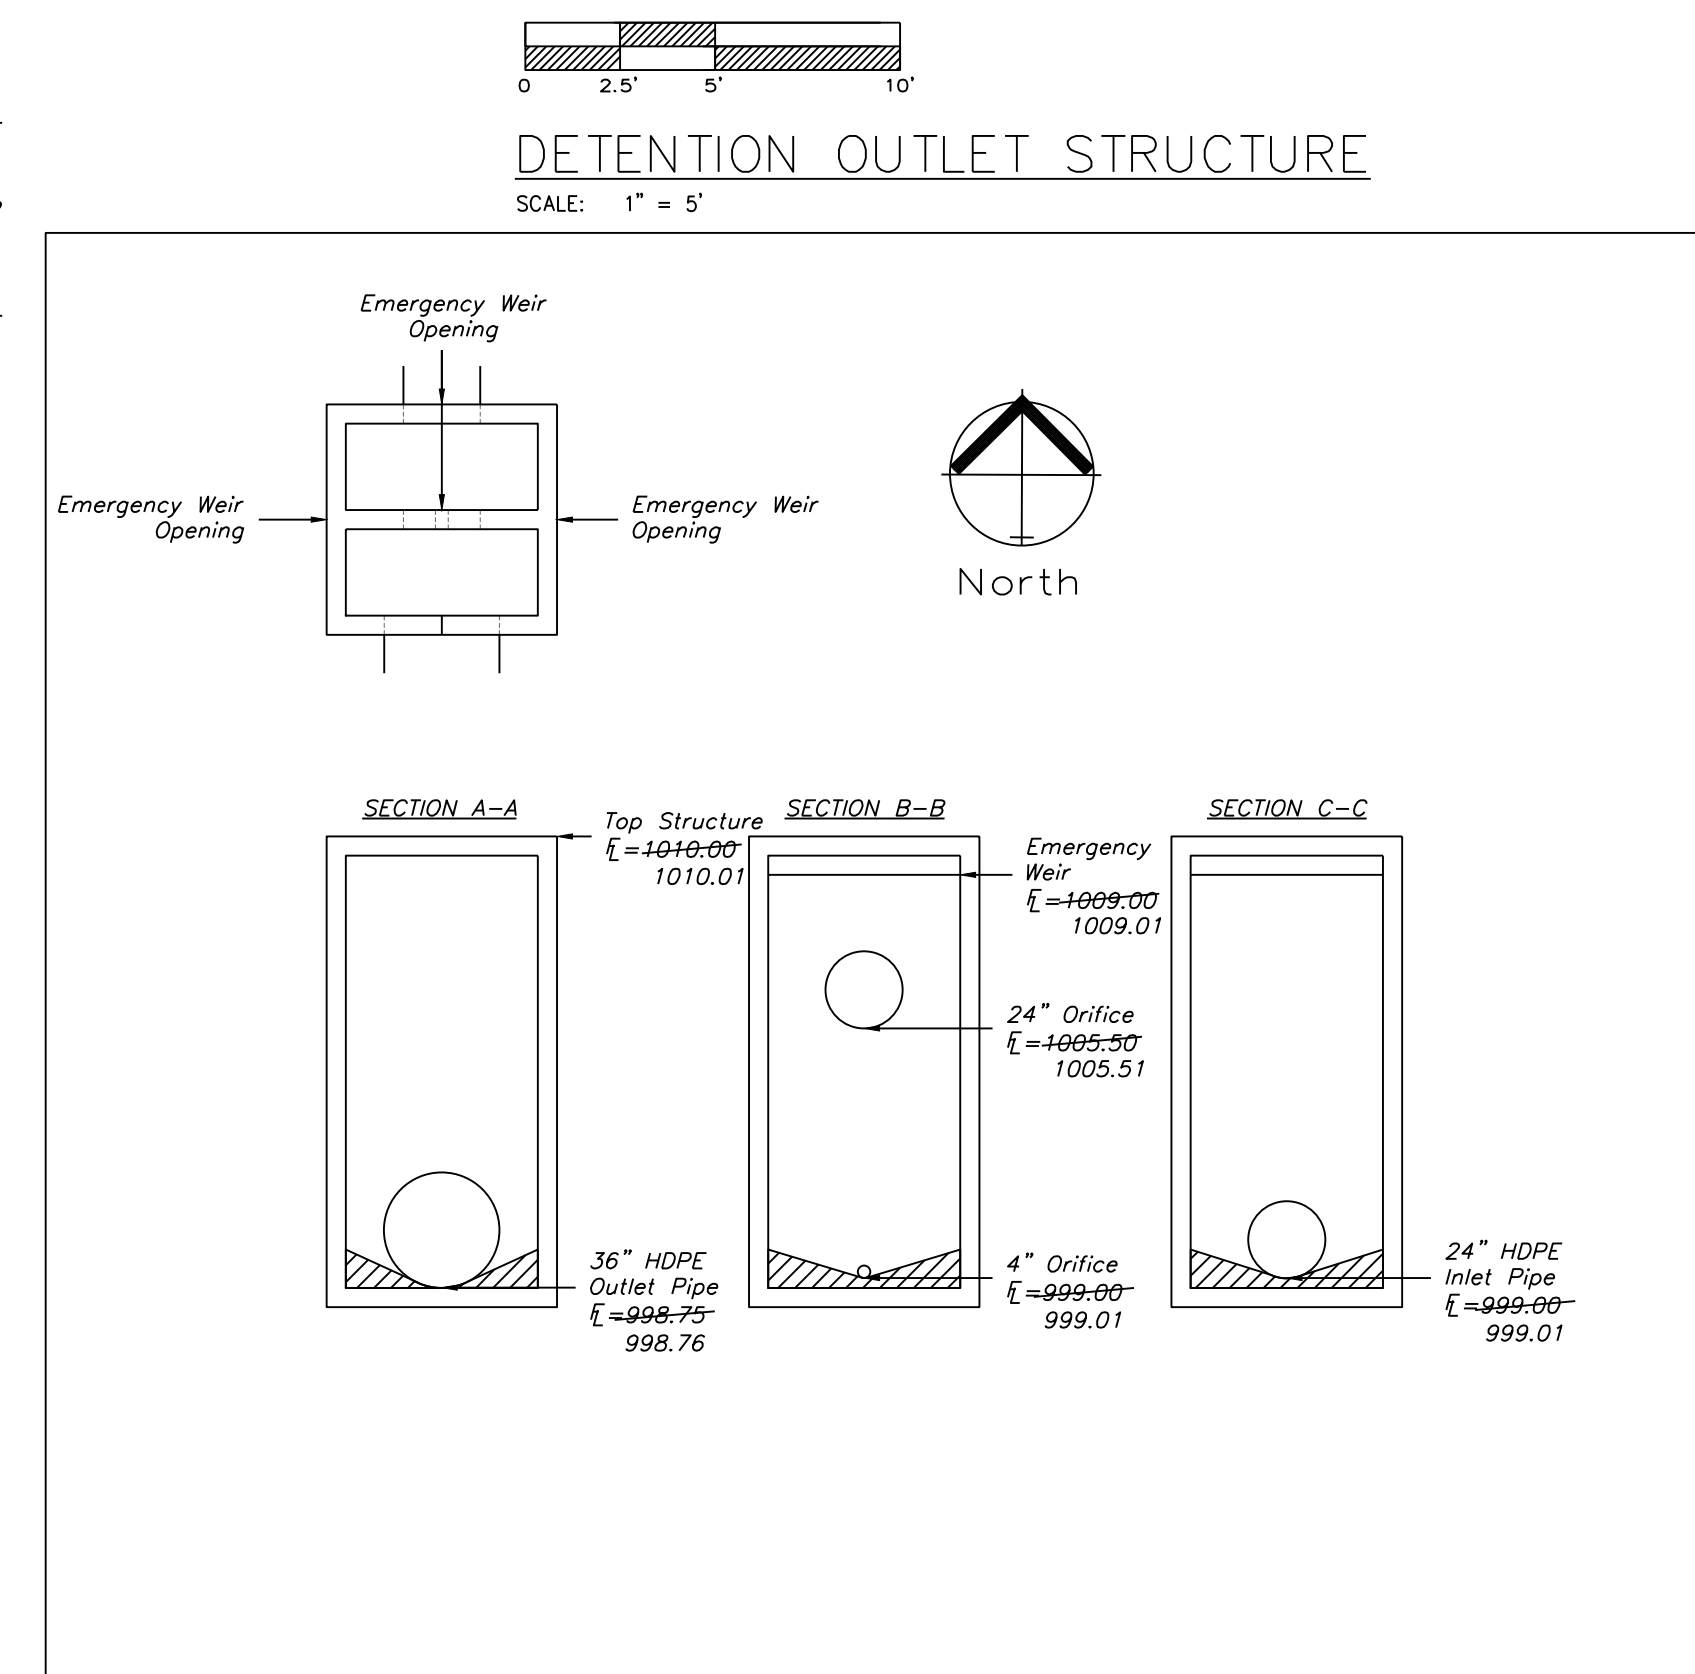


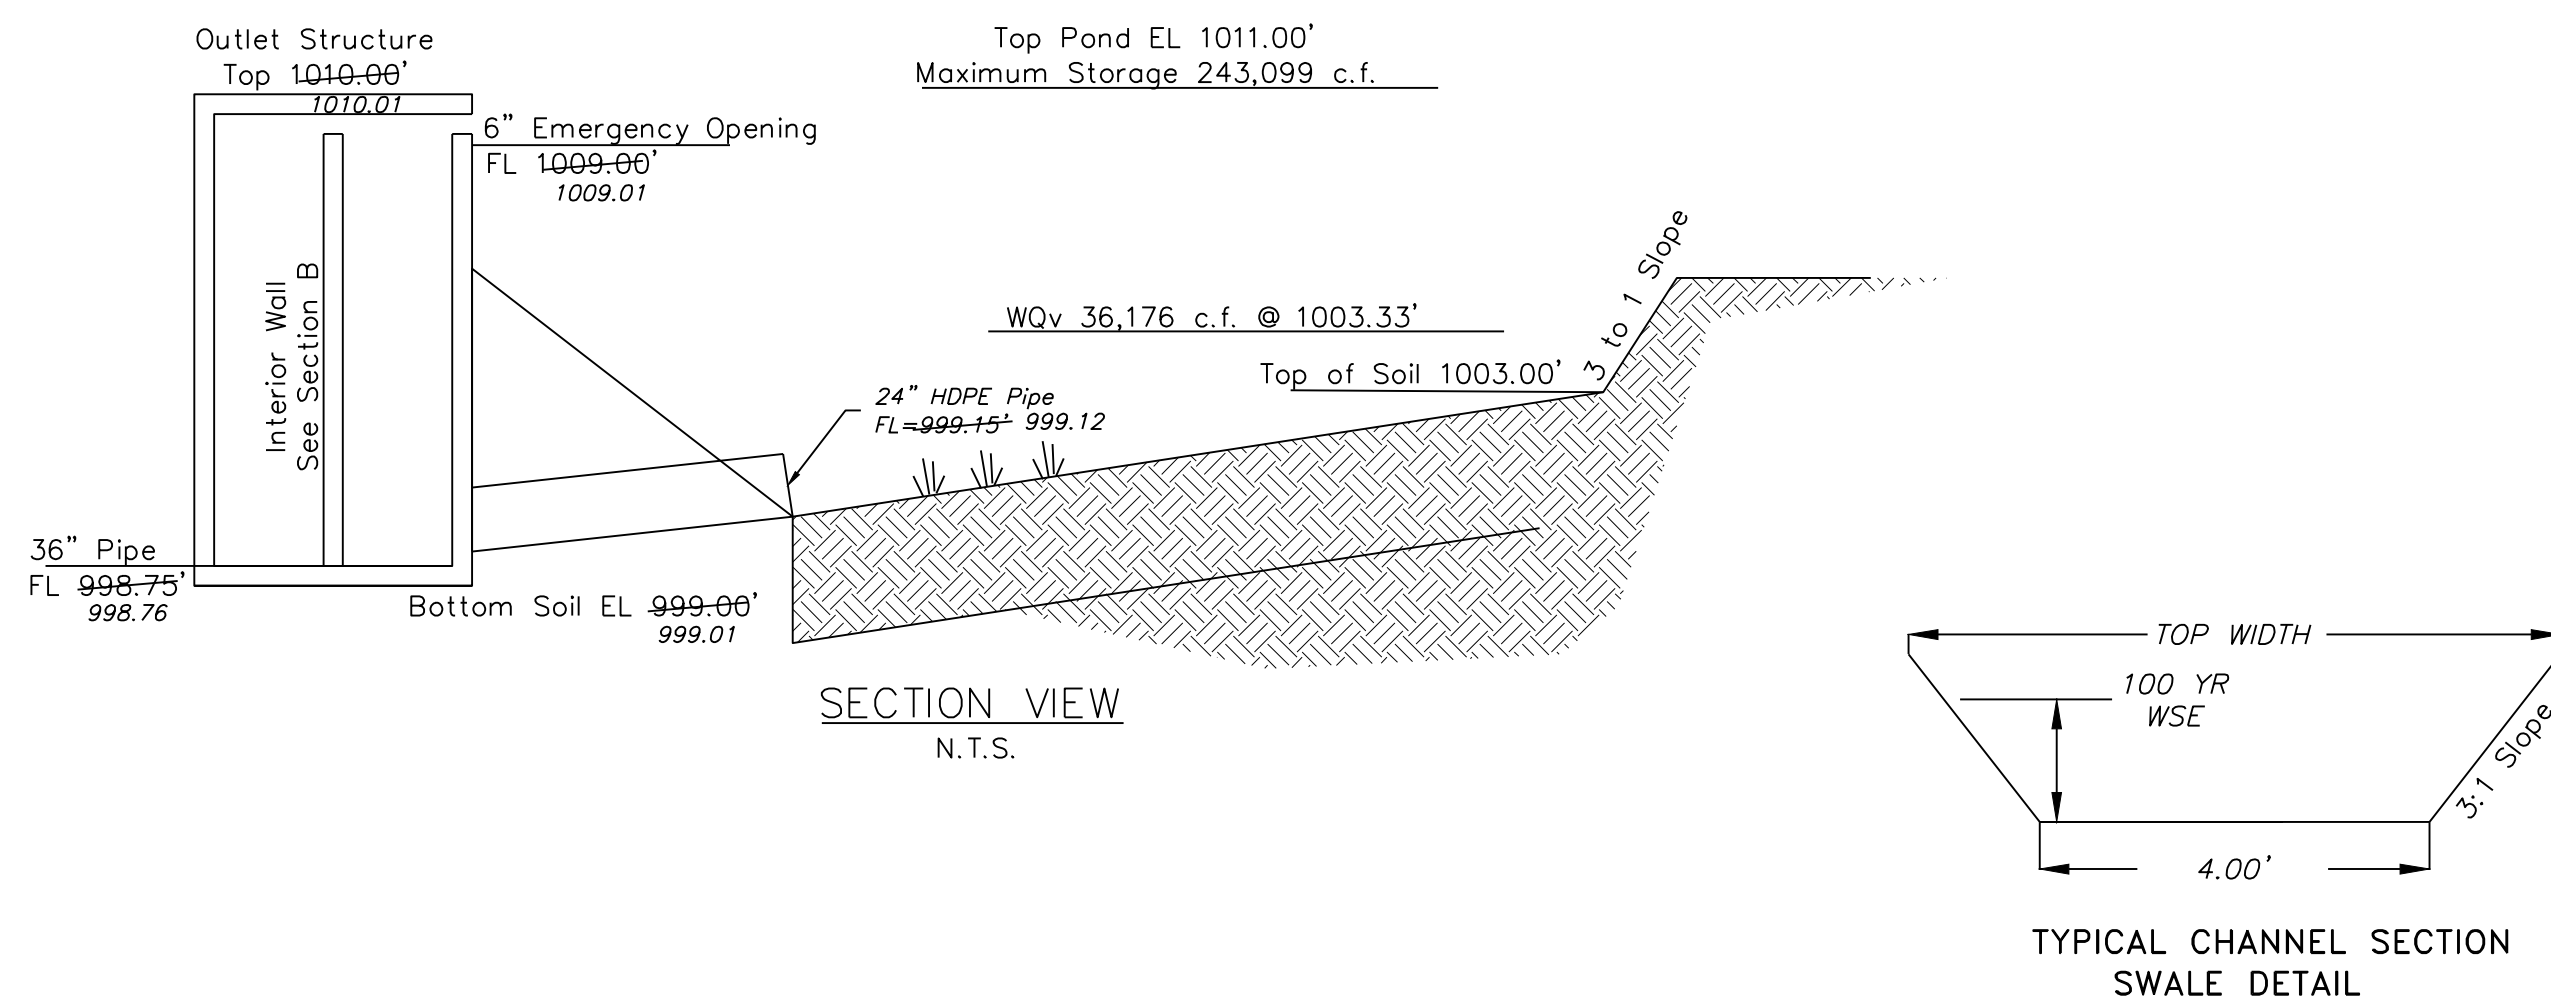

- ### GENERAL NOTES:
1. Locate ring and cover over outlet.
 2. All work and materials shall conform to APWA Sect. 2600.
 3. Use 3/4" chamfer strip on all exposed concrete corners.
 4. Steps required @ 16" O.C. when depth from top of casting to invert exceeds 4 feet.
 5. Boxouts will not be allowed to project through the corners of the structure.
 6. The minimum reinforcing shall be 1 H-bar over a cast-in place pipe and 2 H-bars over a precast boxout.
 7. Limit opening height to 6" with No. 5 galvanized bars extending to corner rebars.
 8. Show field inlet orientation on plans plus number and size of opening.
 9. O.R. = one half outside pipe diameter (O.D.).
 11. 4" ϕ field tile or precast hole shall be located at entering pipe and in the front face slump points. These tiles or openings shall be capped with 1/4" galvanized wire mesh on the outside of the inlet and clear the invert and base concrete.
 12. Location of the Manhole shall be located along the Northeast side of the structure.

**RELEASE FOR
CONSTRUCTION
AS NOTED ON PLANS REVIEW
DEVELOPMENT SERVICES
LEE'S SUMMIT, MISSOURI
06/07/2021**