

DESIGN LOADS:

25 PSF TCLL 10 PSF TCDL

WWW.BLDR. Builders **FirstSourc**



JOB No.	3008813
DESCRIPTION	C&H - 152 Cobey Creek
JOB ADDRESS	3550 SE Corbin St.
CITY	LEE'S SUMMIT, MO
DESIGNER	Scott Clevenger
DATE	4/26/2022

ROOF TRUSS LAYOUT

PAGE

7 of 1

DO NOT CUT, DRILL, NOTCH, OR OTHERWISE DAMAGE TRUSSES. Contact your BFS Representative for assistance PRIOR TO modifying any truss. Espanol - (NO CORTE, PERFORE, HAGA MUESCAS O DANE DE CUALQUIER OTRA MANERA LAS TRUSSES (CERCHAS DE MADERA). Contacte a su representante de BFS para asistencia ANTES de realizar cualquier modification.)

realizar cualquier modification.)

1. This Truss Placement Diagram is intended to serve as a guide for truss installation. This Diagram has been prepared by a Truss Technician and is not an engineered drawing.

2. The responsibilities of the Owner, Building

The responsibilities of the Owner, Building Designer, Contractor, Truss Designer, and Truss Manufacturer shall be as defined by the TPI 1 National Standard.

3. The wood components shown on this diagram are to be used in dry service (moisture content<19%) and non-toxic environmental applications. The metal plates and hangers are galvanized to the G60 Standard unless noted otherwise.

Refer to the Truss Design Drawings for specific information about each individual trust design.

design.
5. The Truss Technician shall provide Truss-to-Truss Connection Requirements. Any special or other connection shall be the responsibility of the Building Designer.

6. The Truss Placement Diagram and Truss Design Drawings are the property of Builders FirstSource and may not be reused or reproduced in part or in total under any circumstances without prior written

In some cases, field framing may be required to achieve the final appearance shown on the Construction Documents.

8. Field framing, including valley rafters, installed over roof trusses shall have a knee brace from the rafter to the truss top chord at intervals of 48" on center (O.C.) or less. Staggel knee braces from adjacent rafters such that the load is distributed uniformly over multiple truss locations and not concentrated at one location or along one truss.

9. Truss Top Chords shall be fully sheathed or have lateral bracing (purlins) spaced at 24" O.C. or less. Truss Bottom Chord Bracing shall not exceed the maximum shown on the Truss Design Drawing. Field framed bottom chord floor or ceiling attachments shall be spaced at 24" O.C. or less. Proper Bracing prevents buckling of individual truss members due to design loads.

10. This Placement Diagram is based upon the supporting structure being structurally adequate, dimensionally correct, square, plumb, and level to adequately support the trusses. The foundation design, structural member sizing, load transfer, bearing conditions, and the structure's compliance with the applicable building code are the responsibility of the

Owner, Building Designer, and Contractor.

11. If Piggyback Trusses are included in this project, refer to the Mitek Piggyback Connection Detail applicable for the project details and wind load category.

12. The Contractor shall follow the SBCA TTB

12. The Contractor shall follow the SBCA TTB Partition Separation Prevention and Solutions for truss attachment to non-load bearing walls and carefully complete these details to avoid gypsum wall board related issues, WARNING:

TRUSSES MUST BE BRACED DURING
INSTALLATION. FAILURE TO DO SO MAY
RESULT IN INJURY OR DEATH. Espanol (TRUSSES (CERCHAS) DEBERAN TENER UN
SOPORTE DURANTE LA INSTALACION. NO
HACERLO PODRIA RESULTAR EN LESIONES O
MUERTE.)

1. Trusses shall be installed in a safe manner

meeting all code, local, OSHA, TPI, and BCSI Specifications. Failure to follow these specifications may result in injury or death. 2. Buildings under construction are vulnerable to high winds and present a possible safety

to high while and present a possible salety hazard. The Contractor is responsible for recognizing adverse weather conditions and shall take appropriate action to prevent injury or death.

Geaun:
3. BCSI INSTRUCTIONS SHALL BE FOLLOWED:
BCSI-B1 = Safe Truss Handling and Installation
BCSI-B2 = Installation and Temporary Restraint
BCSI-B3 = Permanent Restraint
BCSI-B4 = Safe Construction Loading
BCSI-B5 = Truss Damage and Modification


10' 2 1/4"

10' 6 3/4"

Guidelines BCSI-B7 = Floor Truss Installation BCSI-B8 = Toe-Nailed Connections BCSI-B9 = Multi-Ply Girders

BCSI-B9 = Multi-Ply Girders
BCSI-B10 = Post Frame Truss Installation
BCSI-B11 = Fall Protection

4. Follow TPI Requirements for Long Span Trusses (>60').

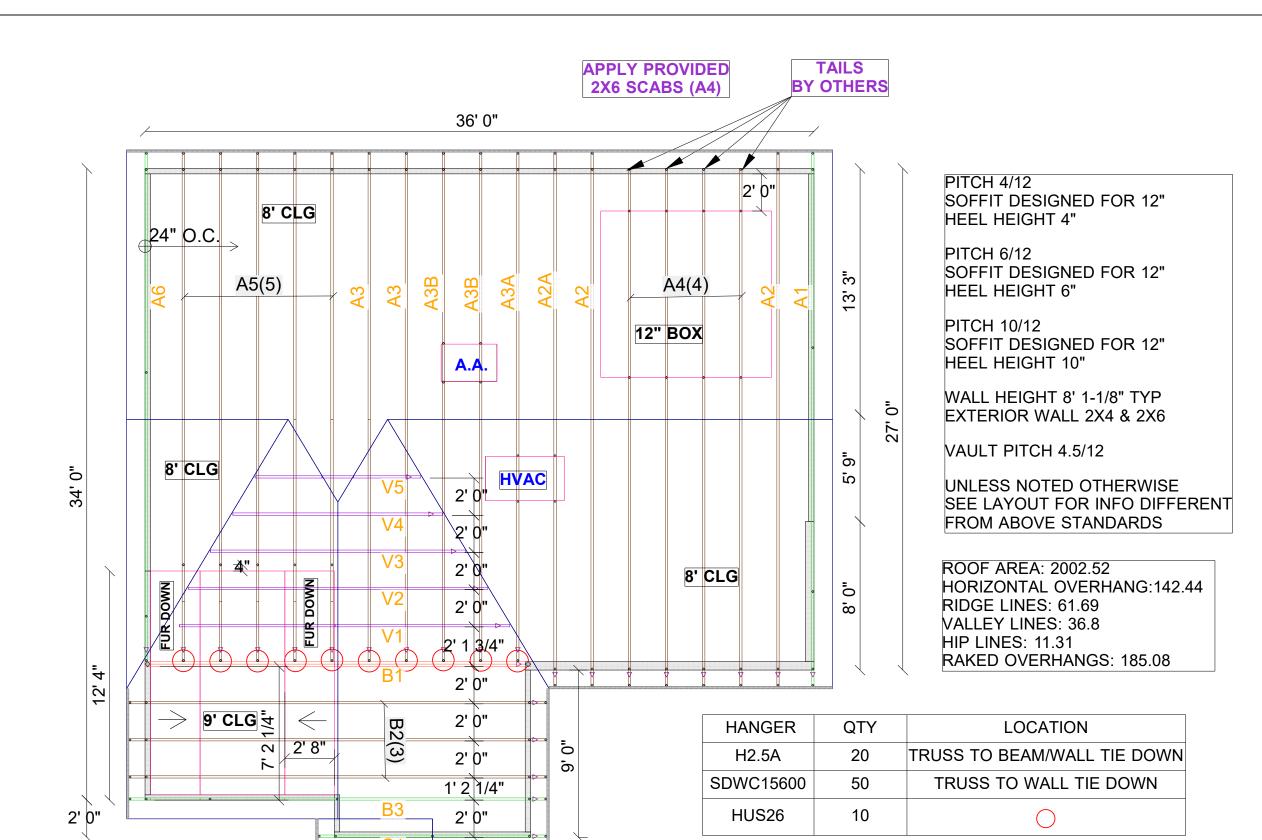

Upper Layout

15' 3"

DESIGN LOADS:

25 PSF TCLL 10 PSF TCDL 10 PSF BCDL

VOLING OF TRUSTS STALLE BY THE REPOVABILITY OF THE USE ALLAHON THE USE ALL TEMPORARY AND PERMARENT BRACING FOR HOLDING PLUMB AND FOR RESISTING LATERAL FORCES SHALL BE DESIGNED AND BY OTHERS. NO LOADS OTHER THAN THE INTALLERS ARE TO BE APPLIED UNTIL AFTER ALL BRACING AND FASTENING IS COMPLETED. AT NO TIME VICENTATED LOADS GREATER THAN DESIGN LOADS BE APPLIED TO THE ALL TRUSTS TO FRAMING CONNECTIONS ARE RECOMMENDATIONS ONLY TO BE SPECIFIED BY THE BUILDING DESIGNER. TRUSSES ARE CAPABLE OF

Builders FirstSource



3008813	C&H - 152 Cobey Creek	3550 SE Corbin St.	LEE'S SUMMIT, MO	Scott Clevenger	4/26/2022
JOB No.	DESCRIPTION	JOB ADDRESS	YLIO	DESIGNER	DATE

ROOF
TRUSS LAYOUT

RUSS LAY PAGE

1 of 1