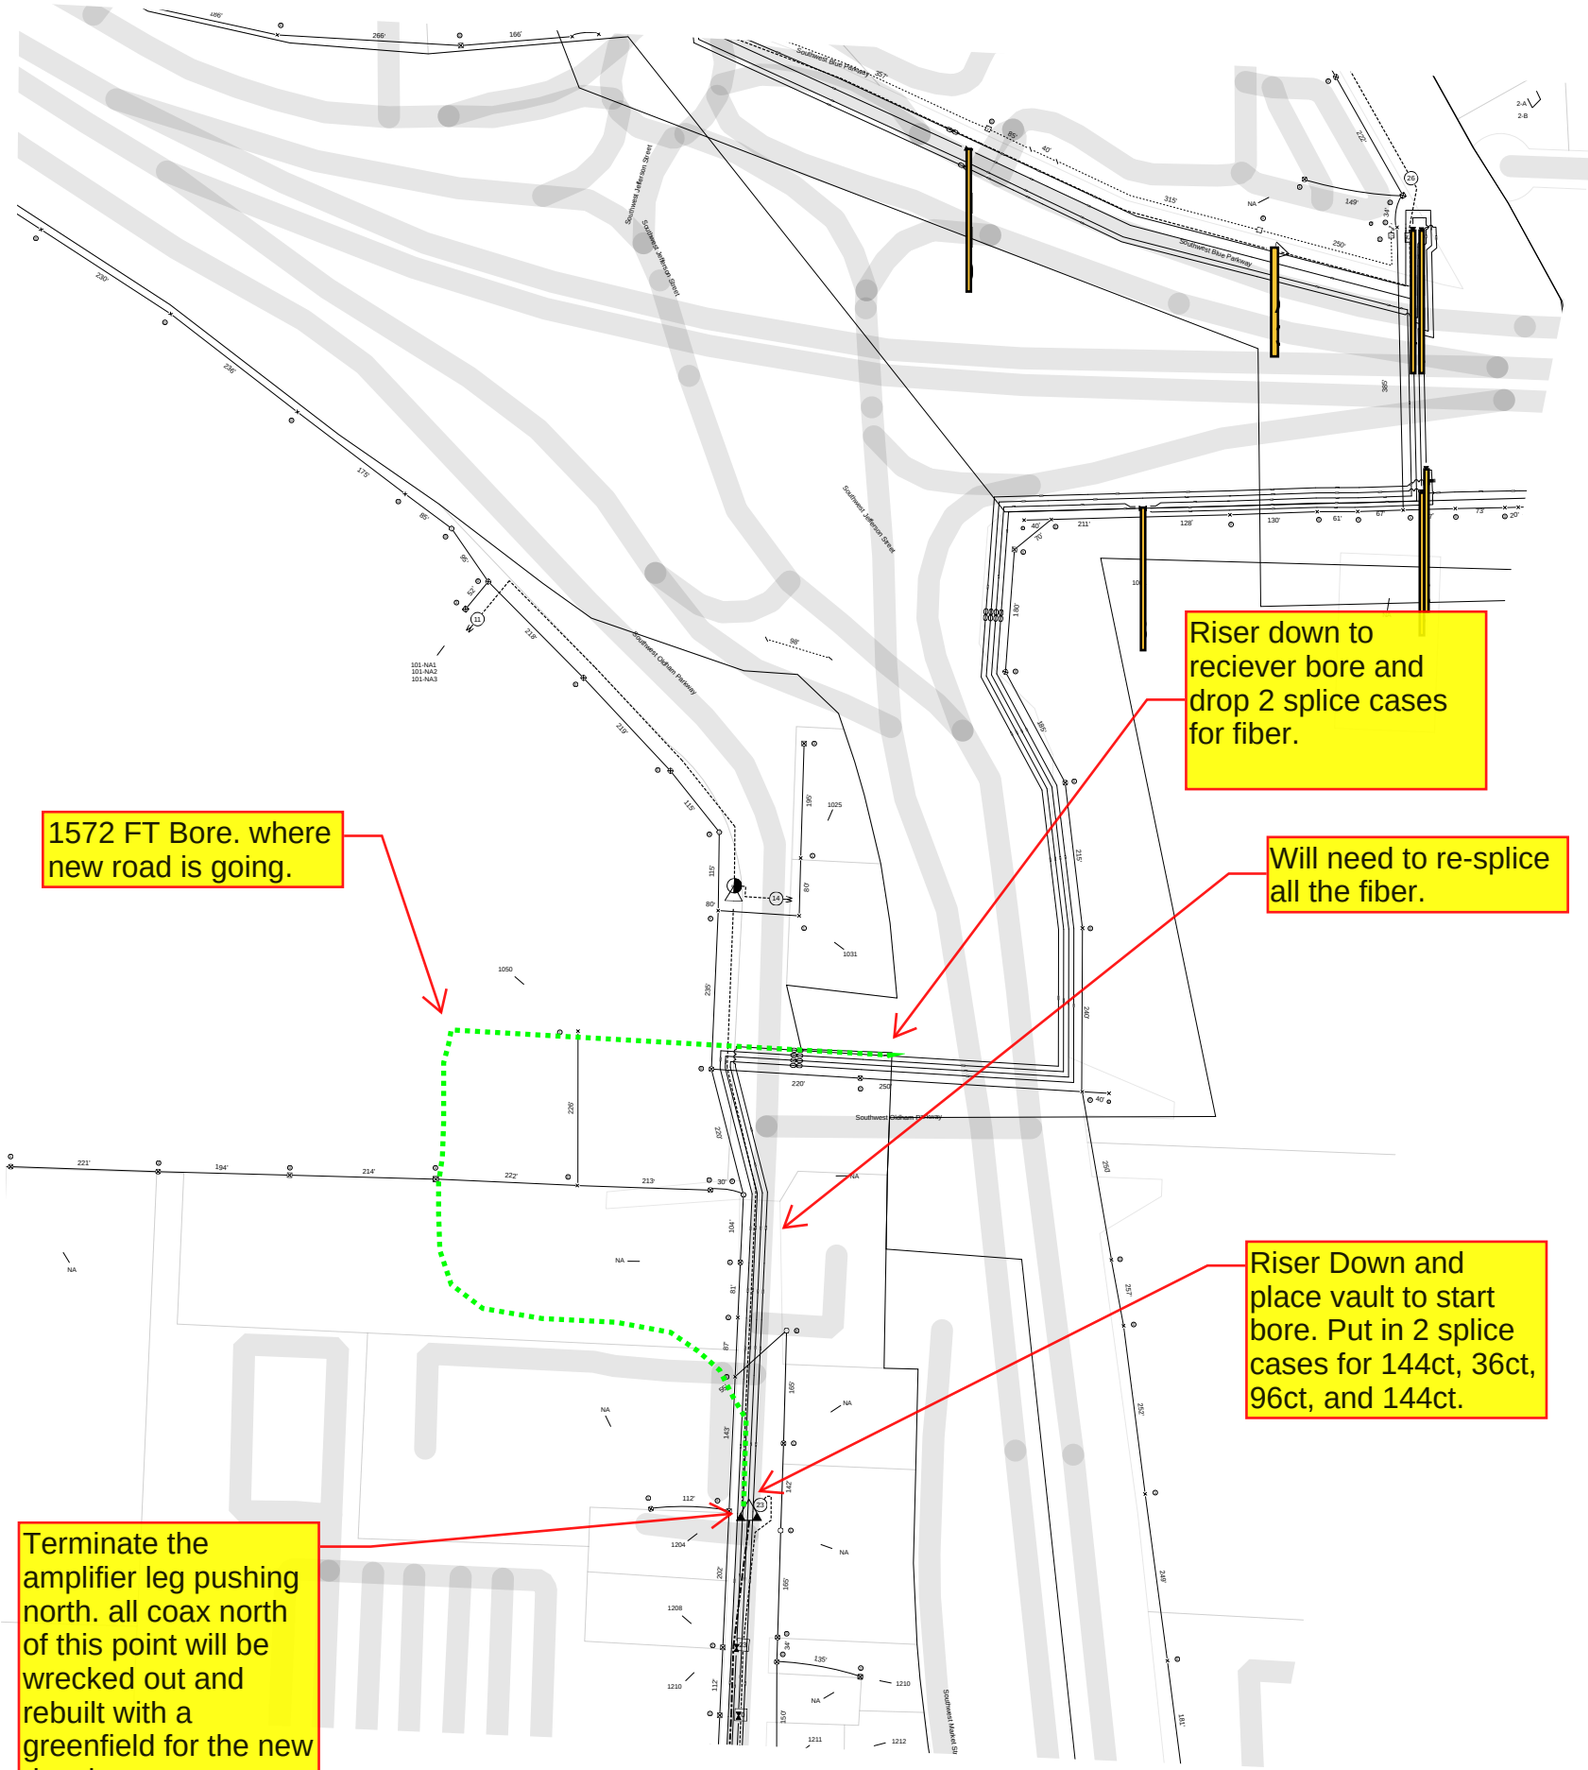
Southwest Bike Parkway
Southwest Jefferson Street
Southwest Oldham Parkway
Southwest Bidham Parkway
Southwest Market St
Riser down to reciever bore and drop 2 splice cases for fiber.
1572 FT Bore. where new road is going.
Will need to re-splice all the fiber.
Riser Down and place vault to start bore. Put in 2 splice cases for 144ct, 36ct, 96ct, and 144ct.
Terminate the amplifier leg pushing north. all coax north of this point will be wrecked out and rebuilt with a greenfield for the new devolpment.